

CLEARVIEW TOWING MIRRORS (ELECTRIC POWER ADJUSTABLE)

CV-LR-D34-EB / CV-LR-D34-IEB

Page: 1 OF 5

Instructions for Installation on:

Range Rover Sport | '06 - '09
Range Rover Sport Supercharged | '06 - '09
Range Rover Sport | '10 - '13
Range Rover Sport Supercharged | '10 - '13

Clearview's premiere line of replacement towing mirrors offers superior design, style, and feature-rich functions to meet your needs! Clearview Towing Mirrors are full replacement towing mirrors and should be your next upgrade if you're doing any repeated towing with your Range Rover Sport.



WATCH VIDEO INSTALL!



SCAN to Watch!



Direct Link:
<https://tr.im/1b61L>



1. First the trim cover for the side mirror must be removed to access the side mirror connector. Use a pocket screwdriver to pry loose.

HOW-TO INSTALL

Page: 2 OF 5

2. To further remove mirror trim cover, use long screwdriver to depress tag latch and pull back.



3. Wiggle cover off free of the fixture.



4. Disconnect the wiring for the mirror.



5. The cover can hang as shown.

HOW-TO INSTALL

Page: 3 OF 5


6. Unbolt the 3 screws holding the original side mirror on.



7. Remove the original side mirror by snaking wiring through opening.



8. Install the New Clearview Towing Mirror, guiding wiring through opening.

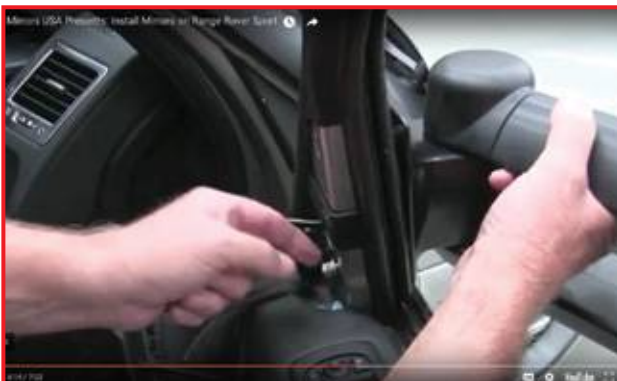

9. Secure bottom 2 bolts first.


HOW-TO INSTALL

Page: 4 OF 5

10. Then run in the top bolt.



11. Tighten up the 3 bolts.

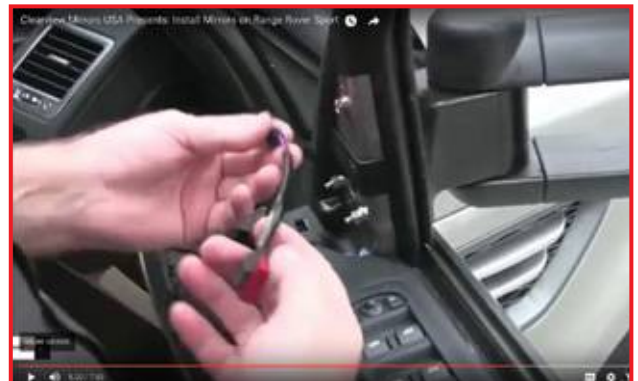

12. Plug in the connector. The towing mirror is now installed.



13. Tuck away the wiring. Test towing mirror functions.

HOW-TO INSTALL

Page: 5 OF 5

14. Return mirror trim cover, securing correctly.



15. Pop in the mirror trim cover. Now use the process again to install the opposite towing mirror. Done!